




Peugeot Boxer / Citroen Jumper / Fiat Ducato / Opel Movano 2007-

Art. 826170


Küljetorud | Sidebars | Боковые трубы | Flankenschutz



- | | |
|--|-----|
| 1. Look / arc / дуга / Bogen | 1+1 |
| 2. Kronstein / bracket / кронштейн / Konsole | 2 |
| 3. Kronstein / bracket / кронштейн / Konsole | 2 |
| 4. Kronstein / bracket / кронштейн / Konsole | 2 |
| 5. Kronstein / bracket / кронштейн / Konsole | 2 |
| 6. Polditav kronstein / bolt bracket / кронштейн / Bolzenhalterung | 4 |
| 7. U-polt / U-bolt / U-болт / U-bolzen | 2 |
| 8. T-polt / T-bolt / T-болт / T-bolzen | 2 |
| 9. Polt / bolt / болт / Bolzen M8x20 DIN933-A2 | 8 |
| 10. Polt / bolt / болт / Bolzen M8x25 DIN7380-A2 | 8 |
| 11. Polt / bolt / болт / Bolzen M10x25 DIN933-galZn | 8 |
| 12. Mutter / nut / гайка / Mutter M8 | 8 |
| 13. Mutter / nut / гайка / Mutter M10 | 14 |
| 14. Seib / flat washer / шайба / Scheibe 8,4x16x1,6 | 24 |
| 15. Seib / flat washer / шайба / Scheibe 10,5x30x2,5 | 22 |
| 16. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8 | 8 |

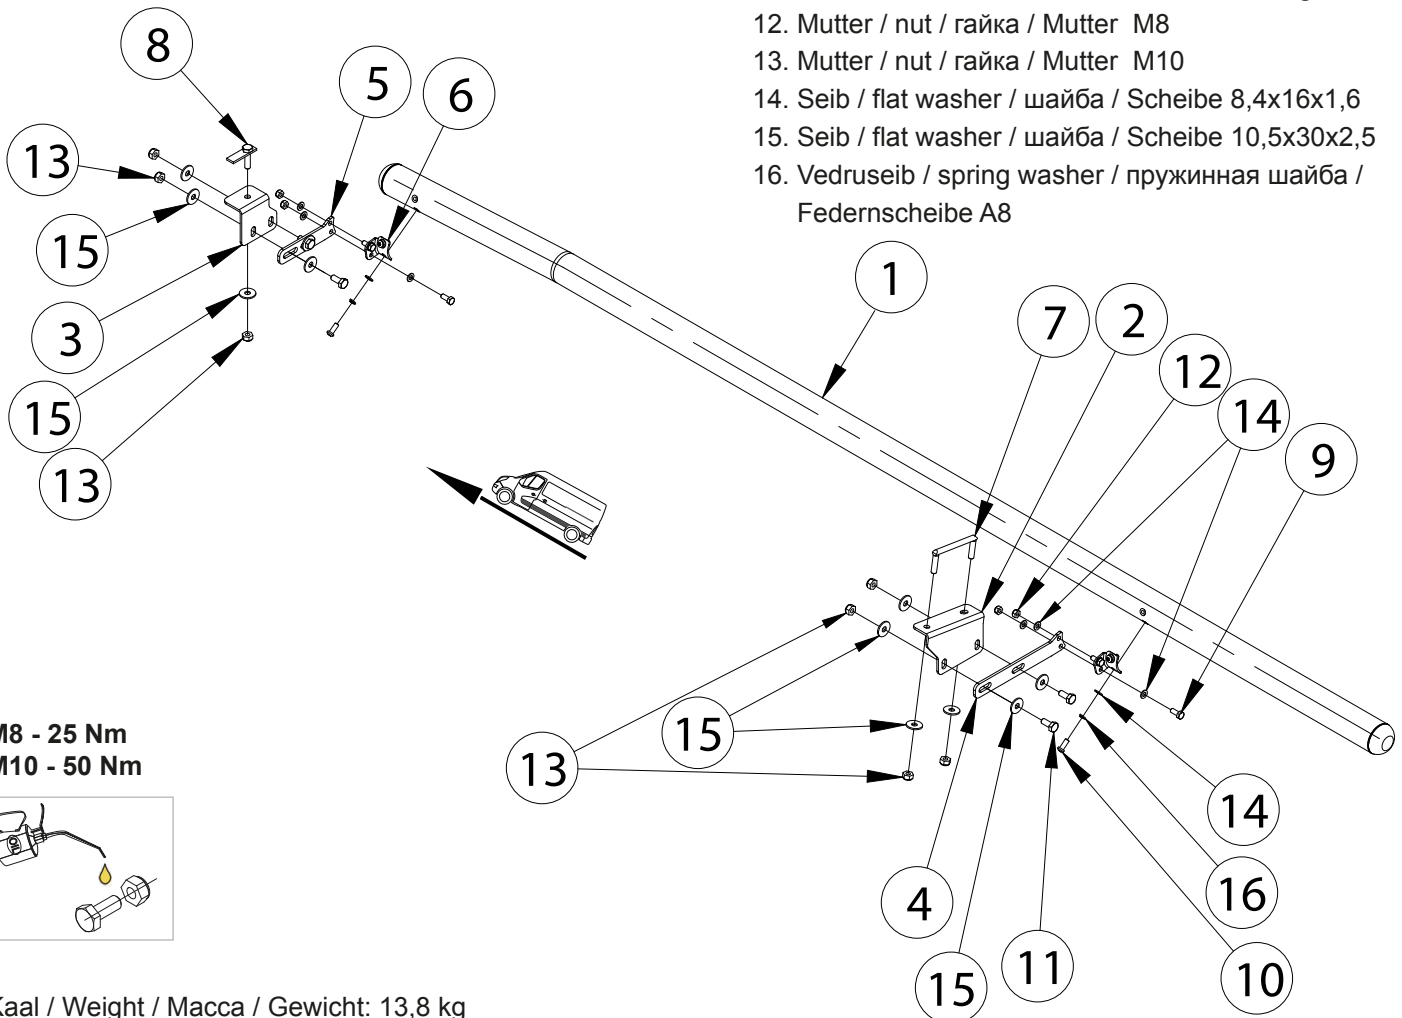

M8 - 25 Nm
M10 - 50 Nm

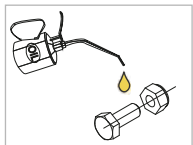

Kaal / Weight / Масса / Gewicht: 13,8 kg

Paigaldusaeg ilma elektritöödetä / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 30 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



